

Hiretech is a world leader in the design and manufacturing of floor sanders and steam wallpaper strippers.

HT8[®] DRUM
Clamp Bar Drum
Floor Sander

The rental industry's proven workhorse.

- Power & extreme durability
- Single or Multi-Speed controls.



Single-Speed # 07006

Multi-Speed # 07006MS

HT8-EX[®] DRUM
Expandable Drum
Floor Sander

The next generation of rental sanders.

- Rental friendly slide-on belts.
- Single or Multi-Speed controls.



Single-Speed # 07006EX

Multi-Speed # 07006EXMS

HTF[®] ORBITAL
High Speed
Floor Sander

Rental's highest performing orbital sander.

- Versatile for exterior decks & interior refinishing.
- Easy to break down & transport.
- Maximum PSI on sandpaper.



Safety Switched # 07009

HT7[®] DISC EDGER
High Speed
Floor Sander

Highly durable & balanced design.

- Long lasting sanding pads.
- Built-in wrench & cord storage.



Safety Switched # 07004

HTW[®] Steam Team
High Capacity
Wallpaper Stripper

The rental steam wallpaper stripper.

- Two-stage anti-scald system.
- Plug-and-strip design.



Safety Vented # 07181

HTP[®] Heavy Duty
Wallpaper
Perforator

Unique 'V' shape perforating head and spiral pin pattern.

- 56 hardened steel pins per roller.
- Use on all types of wall covering.

perfect partner to the HTW Steam Team Wallpaper Stripper.



Heavy Duty Perforator # 09060

Products that are manufactured and distributed by **EXTREME ABRASIVES**: Flap Discs • Cutting & Grinding Wheels
Resin Fiber Discs • Quick Change Discs • Strip Clean Discs • Surface Conditioning Discs • Carbide Abrasive Tools
Danish Carbide Tipped Tools • Wire Brushes • Hand Pads and more. Please visit our website for more info.

HIRETECH PARTS LIST

000920	Screw Clamp Bar (Screwdriver Slot) 2pk	010390	Fan Intake	024865	Screw Guide Abrasive	030840	Screw 2pk	163604	Guard Brush (DU8X)	167704	Shaft Fan
002104	Clip Wrench	010400	Ring Retainer	024870	Clamp Bearing	030850	Nut 2 pk	163616	Guard Drum (Metal DU8)	167708	Shaft Floor Roller
002500	Sanding Pad SL7/B2 (Metal Back)	010410	Spacer Bearing	024875	Shaft Drum EX	030860	Washer 3pk			167716	Shaft Drum
007507	Label Set	010420	Seal	024880	Pulley Drum EX	030890	Clip Handle Knob	163618	Key Paper Clamp (DU8)	167802	Shield Pulley w/Shear Pin
007609	Handle Assembly	010430	Ring Retainer	024885	Bearing Drum Shaft EX 3 Pk.	030910	Tube Handle			167804	Shield Wall End
007611	Tube Steam Plate	010440	Pinion	024890	Spacer Bearing	030920	Screw	163622	Screw 5 pk	167902	Shoe Intake
007612	Bracket Steam Tube, 2 pk	010450	Housing Gear	024895	Washer Drum Shaft EX	030930	Handle Cable	163625	Plug Dust	167905	Shoe Intake EX
007613	Steam Plate Complete	010470	Screw 4 pk	024900	Bolt Drum Shaft EX	030940	Handle Cable	163633	Castor and Lock Nut (HT7-1) 2pk	168104	Sleeve
007614	Rivet 4 pk	010480	Frame Bag Support	024915	Clip Guard Drum	030950	Lead Neon 2 pk	163634	Castor Cover Nut	168203	Spacer Fan Bearing
007623	Spacer Ca stor 4 pk	010490	Bag Dust (HT7/HTF)	024955	Abrasive Guide Retainer	031010	Lead Motor	163636	Cover Inlet	168209	Spacer Bearing
007624	Castor 4 pk	010510	Clip Wrench 2 pk	025120	Buffer Guard Drum EX (2pk)	031020	Bolt 4 pk	163682	Lifting Pin Assembly	168212	Spacer Motor Pulley
007626	Label Product Name	010520	Screw 2 pk	030010	Housing Lower	031040	Lead Lamp/Ballast	163691	Bearing Armature 2 pk	168324	Spring Brush 4 pk
007632	Heater 110 V w/ Seal	010540	Spring Load	030020	Housing Gear	031050	Lead Lamp/Twistlock	163754	Dust Cover (Rockers Switch)	169012	Handle Tube
007633	Heat Sink Compound	010550	Shaft Drive	030022	Housing Gear	031060	Lead Ballast/Twistlock			169015	Tube Handle
007635	Cable Clamp	010560	Bearing 2 pk	030030	Housing Motor	031070	Lead Ground (Earth)	163789	Block Brush Assy	169504	Weight Balance
007636	End Caps Steam Plate 2 pk	010570	Gear Drive	030040	Frame Handle (Pre SN578)	031090	Screw 6 pk	163790	Tube Exhaust	169704	Roller Floor w/Bearing 2PK
007637	Seal Heater	010580	Ring Retaining	030042	Frame Handle (Aft SN578)	031120	Screw 16 pk	163791	Guard Belt	280678	Screw (3 hole bar) 3 pk
007640	Screw 2 pk	010590	Cover Gear	030050	Pedal Foot	031130	Nut 16 pk	163792	Guard Wall End	293406	Gasket Exhaust
007642	Screw, 12 pk	010600	Spring Load	030060	Retainer Wheel	031160	Screw	163796	Guard Drum Assy w/ Label	301102	Bracket
007645	Screw 4 pk	010610	Screw 3 pk	030070	Washer 2pk	031170	Screw	163802	Handle Right Hand	301307	Brushing
007654	Tank Assembly	010620	Guard Disc	030080	Holder Sanding Pad	031180	Screw	163803	Vent Plug 2 pk	302308	Spacer Block
007655	Swivel 2 pk w/ Nut & Olive	010630	Retainer	030090	Cover Motor	031280	Bush Insulator	163804	Strain Relief Handle Cable	304204	Cover Motor
007661	Hose Assy (Nut Olive Swivel)	010640	Shim 4 pk	030100	Pin 2 pk	031300	Plug Bearing	163805	Motor Brush Cover L.H.	304207	Gear Housing
007662	Lead Cut Out Heater 2 pk	010660	Washer Clamp Bolt (010720)	030110	Bush Eccentric	031310	Cap Sanding Weight	163806	Handle Left Hand	316804	Housing Motor
007664	Rail 2 pk	010670	Bolt Clamp (010720)	030120	Balance Weight	031320	Sanding Weight HTF	163807	Bag Dust (Super 7)	467308	Plug Gearbox (HT7-1/S7R)
007683	Castor Bracket 2 Pk	010680	Pin Cotter	030130	Shaft Drive	031330	Bearing Washer 2 pk	163813	Screw 2 Pk	497504	Ring Retaining 4 pk
007685	Label Steam Warning	010690	Wrench HT7/Super 7R	030150	Belt Drive	031370	Hook and Loop Pad	163814	Screw 3 Pk	519501	Strain Relief DU8
007686	Nut Swivel	010720	Washer Clamp Bolt	030170	Bush Pulley	031400	Base Twist Lock	163815	Screw		Cable Main Assembly 110V
007688	Spacer 2 pk	010750	Brush Shunt 2 pk	030180	Pulley Drive	031420	Exhaust Guard	163822	Drum Insert Removal Tool	519510	Cable Handle
007697	Olive Swivel	011170	Washer Lock	030190	Pulley Driven	031430	Ring Retainer	163823	Retainer Bag	902550	Bearing Drum Shaft 2 pk
007700	Cover Access	011270	Grease Edger	030200	Pin Pivot	031450	Screw	163826	Retainer Dust Bag Disposable (6pk)	902567	Bearing(fan/roller) 4 pk
007702	Lead Connect Blk	011570	Nut Dust Cover	030210	Pin Pivot	031490	Service Tool	163834	Super 7 Disposable Bag Conversion Kit	903260	Belt Drum (3/4")
007705	Connector Block	011610	Switch 110 Volt (Bias Off)	030220	Latch	031520	Spacer Pulley	163835	Exhaust Bracket Conversion Kit-SL7	903273	Belt Fan (1/2")
007708	Cover Tank Assembly	011720	Castor Adjuster Tool for HT7-2	030230	Latch	031610	Service Tool - Jacking Bolts	163836	Exhaust Bracket Conversion Kit-B2	908989	Mains Lead 110V
007710	Lead Heater Earth	011730	Sanding Pad/Removal Tool	030240	Bearing Bush for HT7-2	031660	Knob Bag Support	163837	Bracket Switch	911045	Base Twist Lock
007714	Lead Mains 110V	011731	Service Tool - Sanding Pad Fit	030250	Lever Park	031670	Washer Lock	163838	Screw 2 pk	911046	Body Twist Lock
007721	Strain Relief (010080)	011740	Pinion Fitting/Removal Tool	030260	Lever Stop	031790	Pin Pivot 2 pk	163839	Switch 110 Volt	911216	Fuse (DU8) 2 pk
007873	Cut Out Double Pole 110/250v	011840	Insert Bearing	030270	Spring Lamp	031800	Bush Bearing 2 pk	163840	Cover Switch (Gasket Screws)	911375	Switch 120/240 (Toggle)
007874	Spacer Cut Out	011850	Service Tool - Extractor Gear	030280	Window Lamp	031810	Screw	163843	Switch Conversion Kit 110V	911629	Lead Switch
007876	Label Instructions	011860	Service Tool - Extractor Seal	030310	Plate Lamp	031820	Screw	163844	Field 110v HTF	911662	Lead Motor Assembly
007880	Lead Connector Block Tank Earth	012310	Sanding Pad (Metal-Backed)	030330	Support Bag (New Style)	031840	Cover Screw	163849	Dust Bag Paper HT7/ HTF Cs 50	911954	Brush Shunt Assembly 2 pk
007884	Cap Filler and Chain	020035	EZ8 Drive Washer	030350	Support Bag (Old Style)	031870	Spring Latch Return	163857	Adjuster Tool	915028	Key 6 pk
007950	Rail Steam Plate Kit	020045	Reversible Paper Clamp	030360	Housing Eccentric	031880	Screw 2 PK	163865	Service Tool - Locking Drum	920132	Nut 3 pk
007965	Steam Plate & Rail Kit Complete	020320	Multi-Speed Conversion Kit 110V	030380	Spigot Handle	031900	Grip Hand	163866	Cover Motor Brush R.H.	920148	Nut
008212	Spacer Fan	024502	Test Lead (NA)	030390	Bumper	031910	Spacer Latch Pivot	163867	Lead Earth Base Twist Lock	920256	Nut
010010	Screw 4 pk	024510	Cover Switch	030400	Brush Set	031910	Washer	163869	Belt Guard Screw 4 pk	925113	Pin Drum Shaft
010050	Cover Motor	024530	Controller Switch	030410	Brush Finishing Assembly	031910	Old Style	163870	Gasket Cover Switch	960180	Clamp Handle Bracket
010070	Housing Motor	024555	Cable Main Assembly	030425	Plate Cover	031910	Nut	163871	Screw Switch Housing 4 pk	960183	Bracket Handle Cross
010080	Strain Relief	024555	MultiSpeed 110v (NA)	030440	Housing Switch Assembly	032000	Field 110v HTF	163906	Handle Single Grip	962003	Screw 4 pk
010100	Cable Main Assembly 110V	024580	Cable Handle	030450	Cap Retaining	032003	Clamp Bearing 2 Pk	163907	Handle Cross	962084	Screw 4 pk
010140	Handles 2 pk	024600	Buffer Rubber	030460	Clamp Handle	032037	Dust Bag Paper HT8/ DU8 Cs 50	164004	Holder Brush Motor 4 pk	962103	Screw
010150	Screw Handle 4 pk	024605	Bolt	030470	Bearing	032037	HTF Cs 50	164004	Holder Brush Motor 4 pk	962109	Screw 8 pk
010160	Cable Switch Assembly	024615	Screw 6pk	030480	Clip 2 pk	032037	Service Tool - Clamp Drum Cover	164202	Housing Fan	962139	Bolt 2 Pack
010170	Brush Block Assembly	024620	Screw and Washer Set 6pk	030490	Clip 2 pk	032037	Screw, 13 pk	164508	Hook Cable	962170	Screw
010180	Brush Motor 4 pk	024660	Heat Sink Handle Tube	030500	Clip	032037	Cable Handle 220V	164607	Insert Drum (press in) 3 pk	962244	Bolt 5 pk
010190	Screw 4 pk	024810	Guard Wall End EX	030510	Key	032037	Strain Relief HTF	165103	Lift Hear Label	962264	Screw 2pk
010200	Washer 4 pk	024815	Guard Drum EX Assy	030520	Spring Sanding Pad 2 pk	032037	Nut Lock	166172	Baffle Motor	962308	Screw
010210	Screw 4 pk	024820	Guard Drum Side EX	030530	Bush 3 pk	032037	Floor Roller Assembly	166234	Plate Drum Cover (DU8X)	962345	Screw 10 pk
010220	Screw Washer 4 pk	024822	Guard Drum Front EX	030550	Washer 2 pk	032037	Strain Relief Handle Cable	166906	Pulley Fan 2 Pk	962401	Screw 2 pk
010230	Brush Spring 4 pk	024840	Guide Abrasive Kit 2 Pk.	030580	Pin Pivot	032037	Cable	166909	Pulley Motor	962402	Bolt w/ Nut
010240	Field 110 Volt HT7	024845	Spacer Guide Abrasive 5Pk.	030600	Spring Plunger 2 pk	032037	Armature 110V w/ Bearings+Keys	166916	Pulley Drum	962404	Screw 4 pk
010260	Washer Clamp 2 pk	024850	Guide Abrasive	030630	Stop Rubber	032037	Adjuster Floor Roller	167204	Retainer Baffle	962409	Screw
010270	Washer Lock	024855	Screw Guide Abrasive	030640	Handle Lamp Neon	032037	Bracket Exhaust	167208	Retainer Brush Block	962411	Screw
010280	Screw 2 pk	024860	Nut Lock	030660	Cable Main Assembly 110/120V	032037	Bracket Handle Complete (Metal)	167302	Ring Retaining	962454	Screw 2pk
010290	Baffle			030720	Ballast Start 110/120V	032037	Complete	167302	Ring Retaining	962487	Screw 8 pk (HT7-1/S7R)
010300	Screw 3 pk			030730	Holder Lamp	032037	Fan Intake	167308	Ring Retaining	980004	Spacer 2 Pk
010310	Ring Bearing			030740	Screw 2 pk	032037	Fan Motor	167312	Ring Retaining	980196	Washer
010320	Bearing 2 pk			030750	Lamp	032037	Assembly Fan Intake	167404	Rod Drum Guard	980197	Washer
010330	Armature 110V w/Bearing,Key,Seal			030760	Screw 2 pk	032037	Field Assembly 110V	167608	Seal Fan	980626	Washer Lock 3 pk
010350	Key, 3 pk (915028)			030770	Screw 2 pk	032037	Frame Main			980629	Washer
010360	Fan Motor			030780	Screw	032037	Main Frame EX			980648	Washer 2 Pk
010370	Gasket			030790	Screw 4 Pk	032037	Flange Pulley 3 pk			980652	Washer 2 pk
010380	Plate Exhaust			030820	Screw 7 pk	032037	Gasket Exhaust			990000	Insert Drum (threaded) 3 pk
				030830	Screw 2 pk						